

## Envistar Flex


### Motströmskoppling

Batteriet ska kopplas **motströms**: framledning varmvatten (IN) mot tilluftsidan, returledning (OUT) mot utluftsidan. Dykgivaren ska monteras på kallaste punkten enligt bild.

### Counterflow operation

The battery should be connected for **counterflow** operation: hot water (IN) connected at leaving air side, return line (OUT) connected at the entering air side. The immersion detector should be mounted at the coldest spot according to picture.

Tilluft höger  
Supply air right side

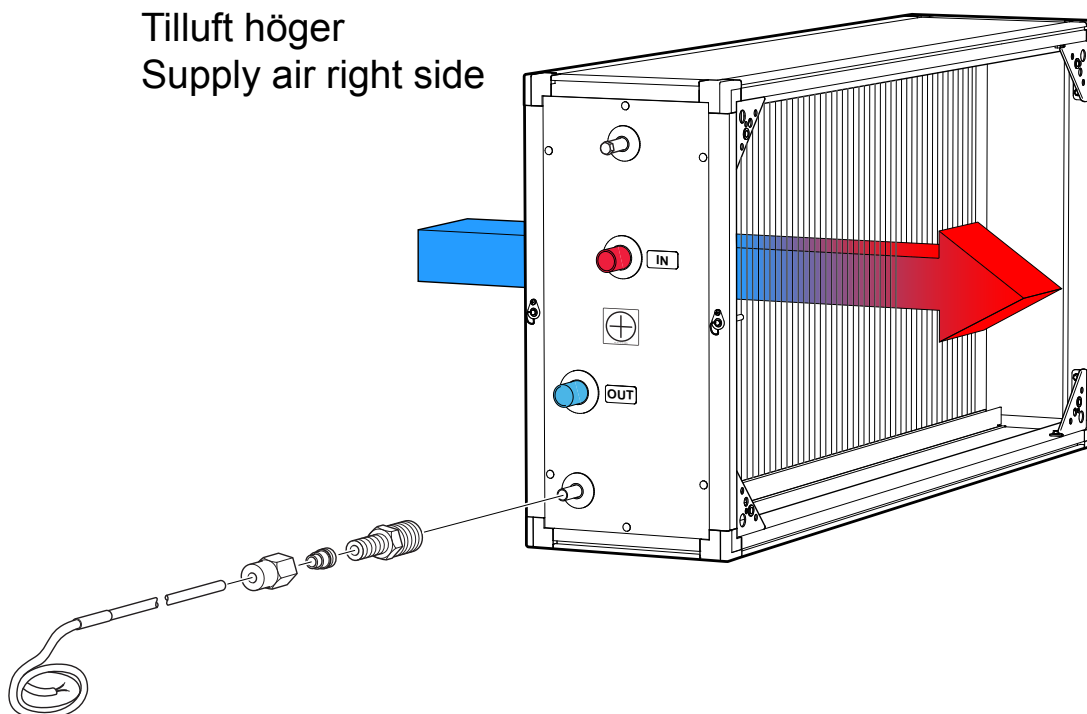

Tilluft vänster  
Supply air left side

